


Passo-a-passo para configurar o modem para aceitar conexão VNC:

- 1) Verificar qual o nº do DNS ou o IP para conexão com a página do modem.

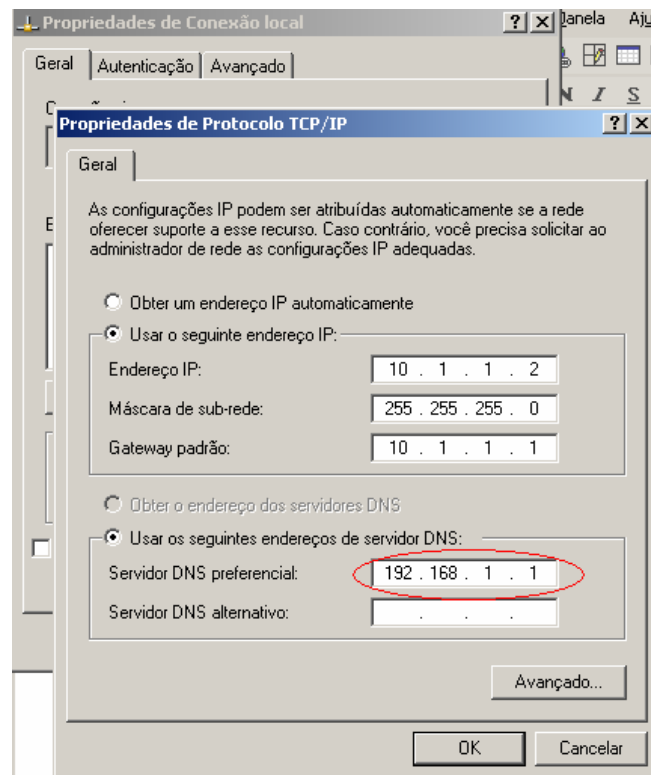

- 2) Acessar a página do modem, através do Internet Explorer, usando o IP do modem, no caso: 192.168.1.1.
- 3) Informar o Usuário e Senha. Usuário = root. Senha = root
- 4) Clicar na aba Advanced.
- 5) Clicar no botão Virtual Server.
- 6) Em Rule Name, colocar o nome da regra, pode ser VNC
- 7) Em Private IP, colocar o IP do micro que vai ser acessado.
- 8) Em Port Start e em Port End, colocar 5900.
- 9) Clicar em Apply.

**D-Link**  
Building Networks for People

## ADSL Router

Home **Advanced** Tools Status Help

### Virtual Server

Virtual Server is used to allow Internet users access to LAN services.




Rule Name



Private IP

Protocol

Port Start  Port End

Port Map



  
 Apply Cancel Help

ID	Private IP	Protocol	Port Start	Port End	Port Map
1	192.168.1.10	TCP	5900	5900	ANY Port  

- 10) Clique na aba Tools
- 11) Clique no botão Misc.
- 12) Clique em Reboot.

**D-Link**  
Building Networks for People

## ADSL Router

Home Advanced **Tools** Status Help

### Miscellaneous Configuration

There are additional tools and features of the DSL-500T

#### Ping Test

Ping IP Address

Ping Result :

#### Connections

IGMP Proxy   Disabled  Enabled

#### Save and Reboot

Force the DSL-500T to system restart.